

# Instructions

## califone PA system



- 1 # 22 Turn Power Switch ON.
- 2 #16 On the Master Volume Control, hold the UP ARROW for 10 seconds  
**Note:** every time the main power is turned off, this step will need to be repeated.
- 3 #5 Turn up microphone volume line 1 and 2.
- 4 #6 Put switch on SPEECH.
- 5 #2A Adjust volume control for separate microphones.  
#2B Adjust volume control for separate microphones.
- 6 Set 2A on any number.
- 7 On microphone match number of the 2A setting.  
**Note:** If you are using 2 microphones, set microphone 2B on a number different from 2A setting. Set second microphone to match 2B setting.

### Lapel Microphone Instructions:

These microphones are VERY SENSITIVE, so turn down either volume 2A or 2B, if microphone still squeals turn down Line 1 or 2 depending on which side you are using, then adjust volume wheel of the belt pack. All microphones have an off position, standby position and an on position.

**Turn off all microphones when not in use for extended periods of time to save battery power.**

### To use CD/Tape Player

- 1 #22 Turn power ON.
- 2 #10 Turn ON CD/Tape on/off volume switch.
- 3 Insert Tape or CD in the proper player.
- 4 #14 Adjust Bass/Treble controls.  
#15 Adjust Bass/Treble controls.
- 5 #10 Adjust volume.
- 6 **To talk when the CD/Tape player is in operation turn microphone on and follow instructions above.**

**To talk over music turn on switch #23, voice priority.**

*Continues next page >*

Cleveland 216.901.0000  
Columbus 614.431.3000  
Toll Free 866.901.6001  
After hours Call any of the numbers above and press Option 2; leave a message and we will respond shortly.  
[www.EVENTSOURCE.net](http://www.EVENTSOURCE.net)

*Instructions continued*

# califone PA system



## To use Extension Speaker with Main System

- Follow steps on Page 1 for microphone set up.
- On main PA System, turn ON the UHF transmitter - #17.
- Set number next to UHF switch to any number other than the 2A or 2B settings on the microphones.

### Extension Speaker Instructions

- 1 Set up speaker on tripod and plug in AC cord.
- 2 Turn ON power switch on top of extension speaker; match number to UHF setting.
- 3 Adjust volume by pressing up or down arrows.
- 4 Adjust Bass/Treble knobs.