

**Includes:**  
20 lbs chocolate

**Options:**  
Additional chocolate  
in dark, milk, white  
Bamboo skewers

Cleveland 216.901.0000  
Columbus 614.431.3000  
Toll Free 866.901.6001  
**After hours** Call any of the  
numbers above and press  
Option 2; leave a message  
and we will respond shortly.  
[www.EVENTSOURCE.net](http://www.EVENTSOURCE.net)

# Instructions

## chocolate fountain



- The feet on the fountain are adjustable to allow you to level the fountain for consistent flow around the entire fountain.
- The fountain must be at least 1/4" from the surface on which it sits to allow sufficient airflow to enter the base and cool the motor.
- The fountain requires approximately 18 lbs of chocolate for normal use, while full capacity is 21 lbs. The chocolate that is included with this fountain is fondue chocolate and no oil is needed to gain the right consistency.
- **The chocolate MUST be placed in the microwave on low power for 3 minutes. Then the chocolate should be stirred with a rubber scraper and put back in the microwave, again on low power for an additional one to three minutes.**
- Carefully pour the melted chocolate into the fountain. Additional melted chocolate can be added to the fountain during use.
- Turn the on/off switch to ON to start the auger. **DO NOT start the auger before the chocolate is poured into the machine!**
- If the chocolate starts to harden, turn the heat dial to LOW for several minutes, **NEVER turn the dial to high heat, as the machine will overheat.**

**Important Note:** The auger motor generates heat and is designed for approximately 2 to 3 hours of use. Operating the fountain for a substantially longer period or operating the fountain with the auger running and the heat on at a higher setting could cause the motor to overheat.

**Important Note:** If the auger is turned off for more than a few minutes, the chocolate in the auger tube will harden. The auger tube will need to be cleaned out before the auger can be restarted. Forcing the auger to spin with the hardened chocolate in the auger tube will cause damage to the motor. If the motor is strained, the reset breaker will turn off the motor. Once the auger tube is cleaned, the motor can be restarted by pressing the reset button that is under the on/off switch.

### **Cleaning The Fountain:**

- Warm/hot water is best to clean the fountain.
- The fountain disassembles into three parts, the auger tube, the auger, and the bowl.
- Remove the auger tube by simply pulling it up off the four stainless posts.
- Pull the auger off of the t-shaft.
- Clean all parts with hot water, the inside of the bowl can be filled with water for cleaning. **DO NOT immerse the base of the fountain in water!**