

Options:
Nacho cheese bag
Nacho cheese trays
Nacho chips, prepacked

**Cleveland Showroom
& Sales Office**
6001 Towpath Drive
Cleveland, Ohio 44125
216.901.0000 Main
866.901.6001 Toll Free

Columbus Sales Office
614.431.3000 Main

www.EVENTSOURCE.net

Instructions

nacho cheese warmer



- 1 Plug the machine into a 120 volt electrical outlet.
- 2 Preheat the dispenser for about one hour.
- 3 Preheat the nacho cheese bag to about 140 degrees.
- 4 Open the door by pulling the door from left to right. Place the cheese bag on the tray with the spout and the tube directed downward.
- 5 Open the tube by turning the cam counterclockwise.
- 6 Guide the tube through the pump slot from top to bottom.
- 7 Close the clamp by rotating the cam clockwise.
- 8 Close the door and cut the remaining tube 1/4 inch below the door with clean, sanitized scissors. The tip of the tube should be visible and extend outside of the dispenser.
- 9 Depress the button to begin operation.

For after hours problems,
call 216.901.0000
Press Option 2,
leave a message and
we will respond shortly.

To dispense cheese:

- 1 Hold food under dispensing tube.
- 2 Press dispensing button until desired amount of cheese has been dispensed.

Removing cheese bag:

- 1 Open the door by pulling forward from the left side.
- 2 Open the tube clamp by rotating the cam counterclockwise.
- 3 Remove the tube from the pump slot by grabbing the tube from the lower end and raising it upward toward the tray.
- 4 Remove the tubing and the bag by continuing to raise the tube upward until it is clear from the tray.
- 5 Remove the empty bag and the tubing from the oven. Do NOT attempt to carry or lift the empty bag by the end of the tube.